


UDM

under desk power module

USER

MANUAL


Thank you for purchasing ABL's UDM power module. UDM has been manufactured and tested in accordance with relevant standards (see contact page).

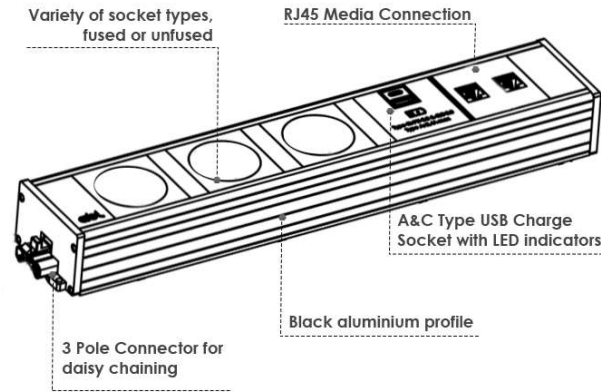

INSTALLATION:


OPTION 1 - Fix the module onto a flat surface

1. Check the screw fixing points on the module
2. Fixate using the provided screws according to the designated positions on the fixators

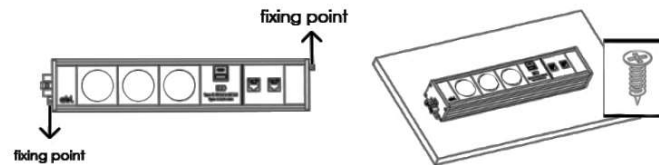

OPTION 2 - Fix the module into a wire basket


Simply place the module into the wire basket

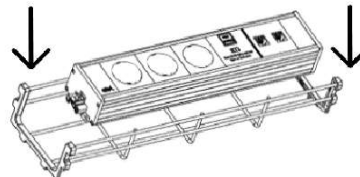

MAIN FEATURES:

- The module is available in Black, with Black aluminium profile
- Available in variations of sockets, USB charge sockets and RJ45 media connections
- Integrated 3 Pole Connector enables daisy chaining with other compatible products
- Rated voltage of UDM power module unit is 250V AC (**C, E, F, G, J, L**), for **B type sockets** 120V AC
- Nominal intensity of the unit:
 - 13A for **G type socket**
 - 16A for **B, C, E, F, J, L type sockets**
- G type sockets are individually fused with 3.15A or 5A fuse. Available in up to four sockets with 5A fuse, and in up to six sockets with 3.15A to comply with BS6396.
- When used with ABL Conference Top Access, it is perfectly suitable for meeting rooms
- It is easily installed and fits perfectly into ABL wire basket. Alternatively secured under the desk

 Note: The most common socket types:



Contact us for more information.

SAFETY NOTES:

- Items such as Vacuum Cleaners, Kettles, Coffee Makers, and Fan Heaters should not be connected via these power modules
- Installation is to be carried out by a qualified professional



www.abl-ltd.com





Complies with BS 5733 (UK)
IEC 60884-1 and IEC 60884-2-7 (Europe)



Kitemark certified on 13A Plugs and Socket outlets
(KM686563)



Manufacturing in-house within central
Europe under strict compliance with
ISO 9001:2015

CONTACT US

UK DISTRIBUTION CENTRE

14 Fleming Close
Park Farm Ind. Estate
Wellingborough
Northants NN8 6UF
United Kingdom


+44 (0) 1933 400 080
sales@abl-ltd.com

EMEA DISTRIBUTION CENTRE

Lava Tolstoja 25
32103 Cacak
Serbia

+381 (0) 32 420 100
sales@abl.co.rs

CONTENTS:

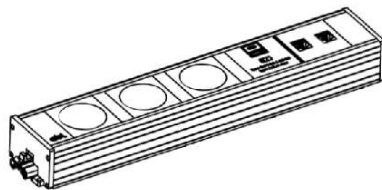

- UDM
power module

x 1

Note: Use mains lead cable to connect UDM power
module with the main power supply

MAINTENANCE:

Do not open, disassemble, change, or modify the
device. Every unauthorized opening or repairing of
the device leads to loss of warranty. During device
usage, you need to follow basic safety measures.
since safety requirements vary, please check with
local laws.

WARRANTY CONDITIONS:

ABL warrants this product as free of defects in
material, design, and workmanship for the period of
twenty-four (24) months from the original date of
receipt of the product, unless applicable national
laws stipulate otherwise. If during the period of
warranty this product proves defective under
normal use and service you should return the
product to the retailer from whom it was originally
purchased. The liability of the ABL is limited to the
cost of repair and/or replacement of the unit under
warranty. The warranty is void if a failure occurs due
to the following reasons:

- Improper device installation
- Improper handling
- Improper transport
- Force majeure



**WARNING: Do not use this product for any
other purpose other than which it was
designed for.**

