

# TRM

ON DESK POWER MODULE

## USER

# MANUAL




SCAN ME

  
www.abl-ltd.com




Thank you for purchasing ABL's TRM power module. TRM has been manufactured and tested in accordance with relevant standards (see contact page).

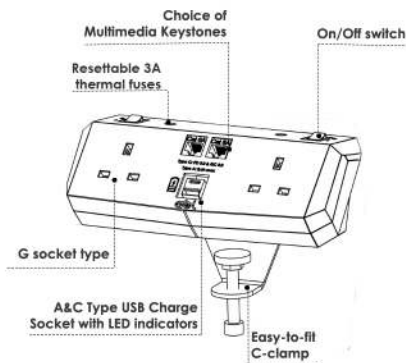

### INSTALLATION:

1. Place the module onto the edge of the desk.

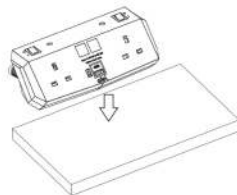

2. Place the clamp onto the back of the module and tighten it using the Allen Key.



### MAIN FEATURES:

- The module is available in Black or White
- Two G type sockets have resettable 3A thermal fuses and individual ON/OFF switches
- Rated voltage of TRM power module unit is 230V AC
- Nominal intensity of the unit is 6A
- Smart charge features A+C Type, PD 3.0 & QC 3.0
- Two multimedia blanks can include RJ45 Cat6A, USB3.0 or HDMI couplers
- The module uses an easy-to-fit C-clamp
- Designed to fit desks thickness between 15 and 45 mm
- All standard options come with 0.5m drop lead to 3 Pole Connector. Cable type: H05VV-F 3x1.5 mm<sup>2</sup>

### SAFETY NOTES:

- Items such as Vacuum Cleaners, Kettles, Coffee Makers, and Fan Heaters should not be connected via these power modules
- Installation is to be carried out by a qualified professional



Complies with BS 5733 (UK)  
IEC 60884-1 and IEC 60884-2-7 (Europe)



Kitemark certified on 13A Plugs and Socket outlets  
(KM686563)



Manufacturing in-house within central  
Europe under strict compliance with  
ISO 9001:2015

## CONTACT US

### UK DISTRIBUTION CENTRE

14 Fleming Close  
Park Farm Ind. Estate  
Wellingborough  
Northants NN8 6UF  
United Kingdom

+44 (0) 1933 400 080  
sales@abl-hd.com


### EMEA DISTRIBUTION CENTRE

Lava Tolstoja 25  
32103 Cacak  
Serbia

+381 (0) 32 420 100  
sales@abl.co.rs

www.abl-hd.com

## CONTENTS:



- TRM  
power module

x 1



- Clamp

x 1

Note: Extended C-clamp available. Use mains lead  
cable to connect TRM power module with the main  
power supply

## MAINTENANCE:

Do not open, disassemble, change, or modify the  
device. Every unauthorized opening or repairing of  
the device leads to loss of warranty. During device  
usage, you need to follow basic safety measures.  
since safety requirements vary, please check with  
local laws.

## WARRANTY CONDITIONS:

ABL warrants this product as free of defects in  
material, design, and workmanship for the period of  
twenty-four (24) months from the original date of  
receipt of the product, unless applicable national  
laws stipulate otherwise. If during the period of  
warranty this product proves defective under  
normal use and service you should return the  
product to the retailer from whom it was originally  
purchased. The liability of the ABL is limited to the  
cost of repair and/or replacement of the unit under  
warranty. The warranty is void if a failure occurs due  
to the following reasons:

- Improper device installation
- Improper handling
- Improper transport
- Force majeure



**WARNING: Do not use this product for any  
other purpose other than which it was  
designed for.**

